

Current on air flow highlighted in blue

Ubuntu 18 server
Tsplay looping multi-audio-90s.ts

tsplay -loop -maxnowait
off -buffer 4096 multi-
audio-eng.ts -udp
239.172.52.2 10002 -i
10.172.17.52

Ateme Titan Live
Firmware 4.1.34.1 (Live)

• 17.1 KEYT NOW HD 1080p

S & T ATCaster
Version 0.08.04

Running in virtual machine on
VMWare server

Enensys SmartGate
firmware 2.7.1
A/324 Rev 2019
A/330 Rev 2019

Running in virtual machine on
VMWare server

Enensys MediaCast
Version 1.7.1

Running in virtual machine on
VMWare server

Triveni Guidebuilder
Version 5.4.0.10215

Running in virtual machine on
VMWare server

Triveni Gateway
Version 1.0.1.1630

Running in virtual machine on
VMWare server

Switch between
inputs by
changing STLTP
multicast
address in
exciter

Gates Air Exciter
Model UAXTE-4R37
Software version 04.14.0004
491 MHz

**Gates Air
Transmitter**

Santa Barbara CA
NPG Broadcast ATSC 3.0 test
facility

This diagram may include proprietary,
confidential and/or legally privileged
material. Any review, re-transmission,
dissemination, or other use of, or taking
any action in reliance on, this information
by persons or entities other than the
intended recipient is prohibited.

